 


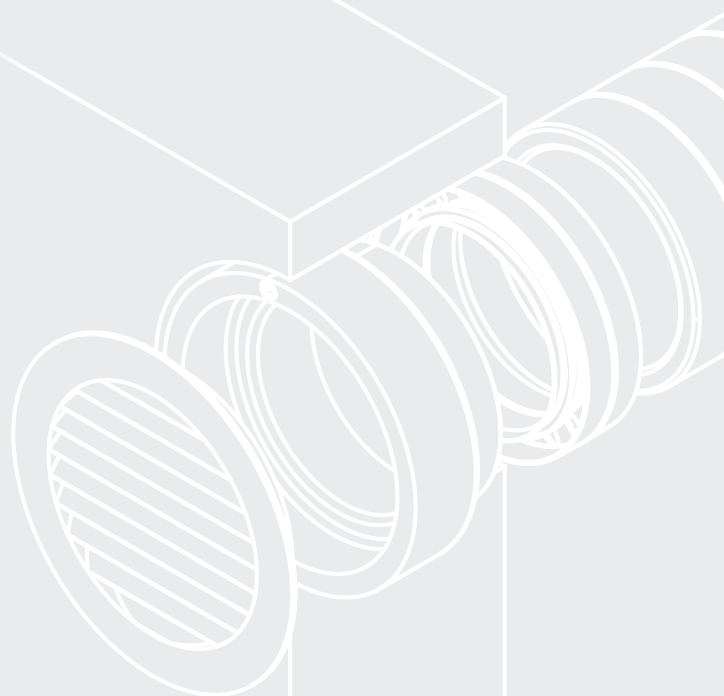

INSTALLATION INSTRUCTIONS

> logato.co.uk

 


VERSATILE SYSTEM


ARIA
ADURO

ARIA ADURO


3 diameters: 125 / 160 / 200 mm

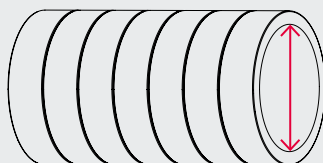

Inner diameter
125 mm

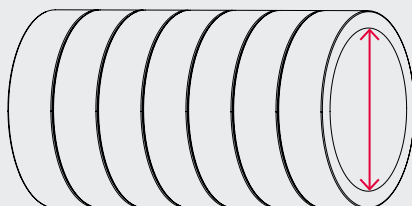 

Inner diameter
160 mm

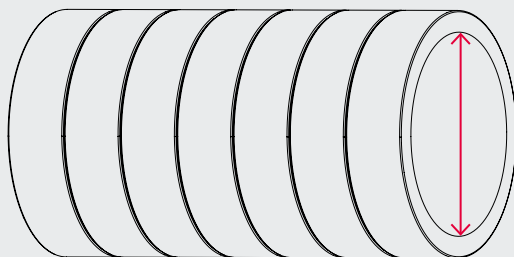 

Inner diameter
200 mm

CONTENTS

INSTALLATION INSTRUCTIONS



04	PIPE 1 m
04	Easy cutting
05	Cutting angle
06	Connecting
07	MHRV UNIT ADAPTER
	Connecting
08	CONNECTOR
	Connecting
10	MOUNTING BRACKET
10	Connected in series or in parallel
11	Installation
12	Arrangement
13	REDUCER 125/160/200 mm
13	Trimming
15	Installation
16	BEND 45°
	Installation
17	AIR INTAKE / OUTLET GRILLE
17	Recommended wall opening diameter
18	Installation – recommendation
19	DAMPER AND TEE
	Installation – recommendation

PIPE 1 m

ARIA
ADURO

ARIA ADURO

 
 
● ○ ○ Easy cutting

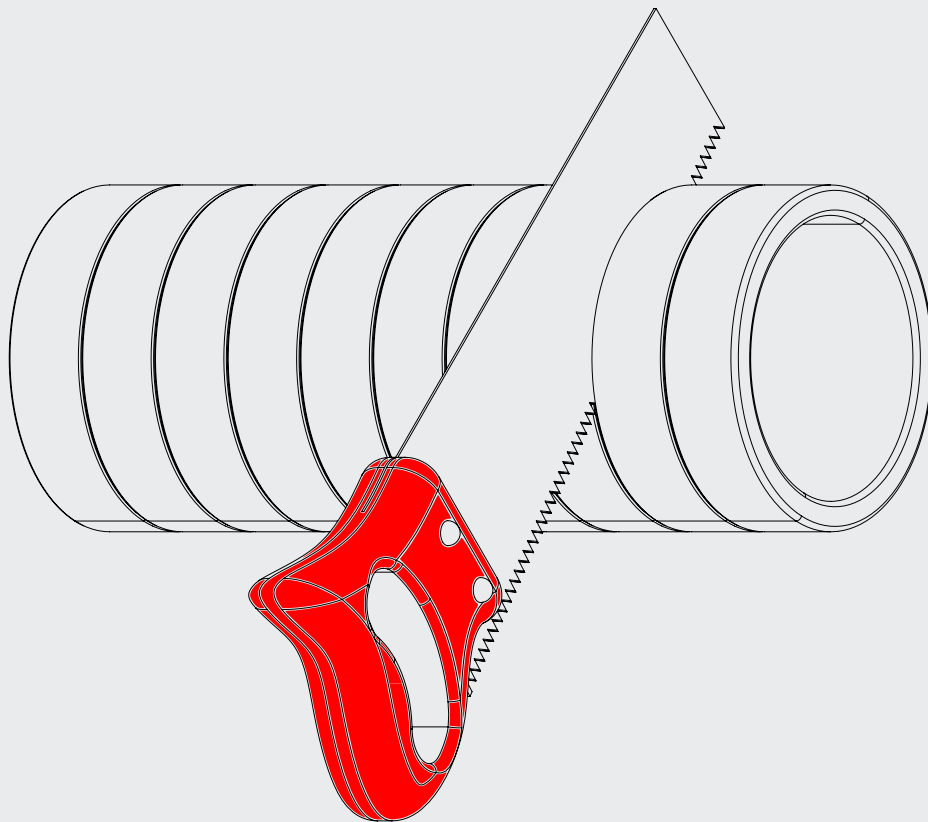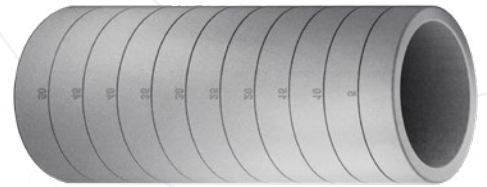

PIPE 1 m

ARIA ADURO

 
 
● ● ○ Cutting angle

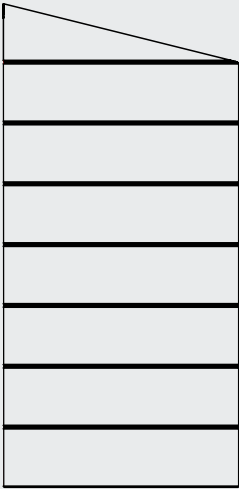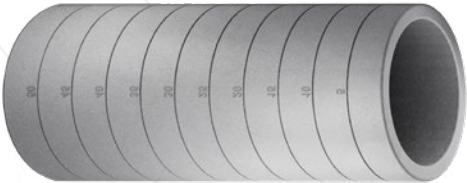

PIPE 1 m

ARIA ADURO

  ● ● ● Connecting

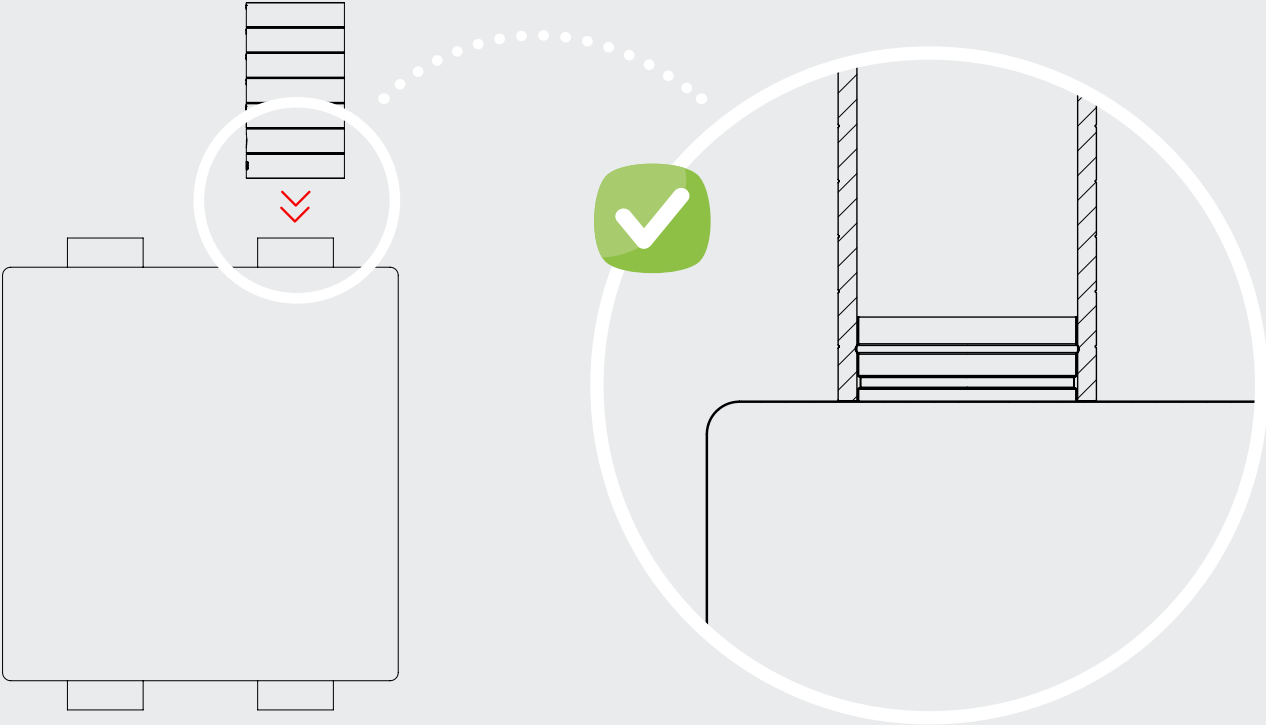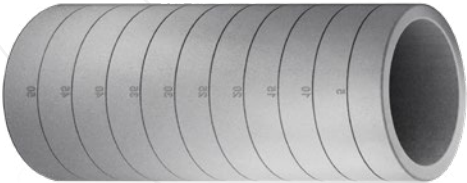

MHRV UNIT ADAPTER

ARIA ADURO

 
ARIA
ADURO

● Connecting






160 mm

- ❶ ADURO 160 mm
- ❷ **ADAPTER 150/160**
- ❸ Ø 150 mm

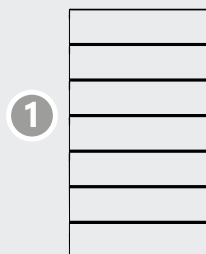

200 mm

  
 
- ❶ ADURO 200 mm
- ❷ **ADAPTER 180/200**
- ❸ Ø 180 mm

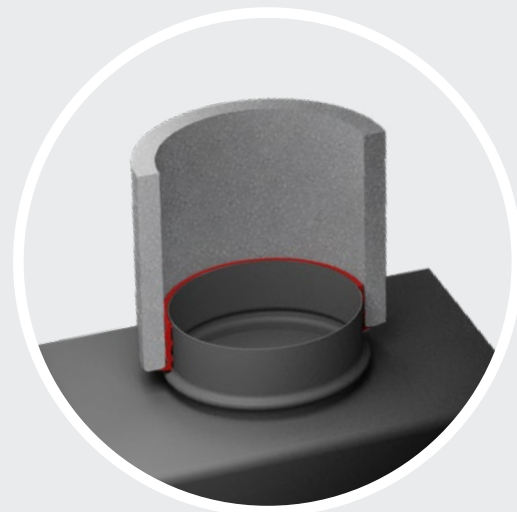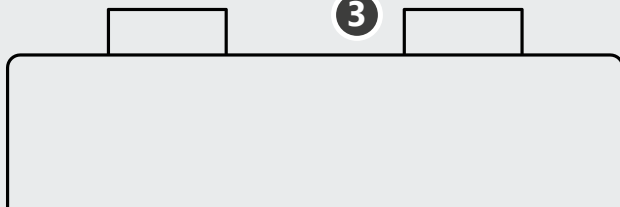

CONNECTOR

ARIA ADURO

  
● ○ Connecting

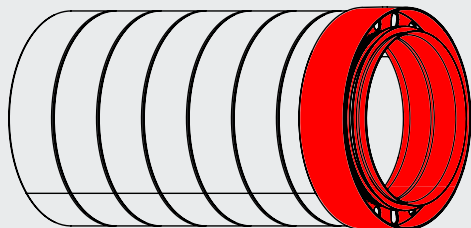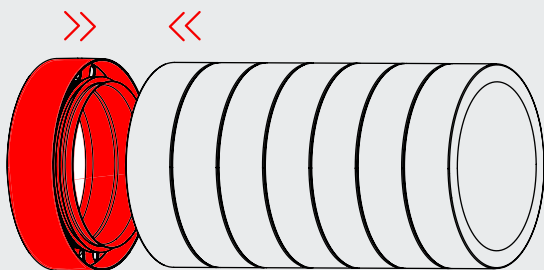

CONNECTOR

ARIA ADURO

 ● ● Connecting


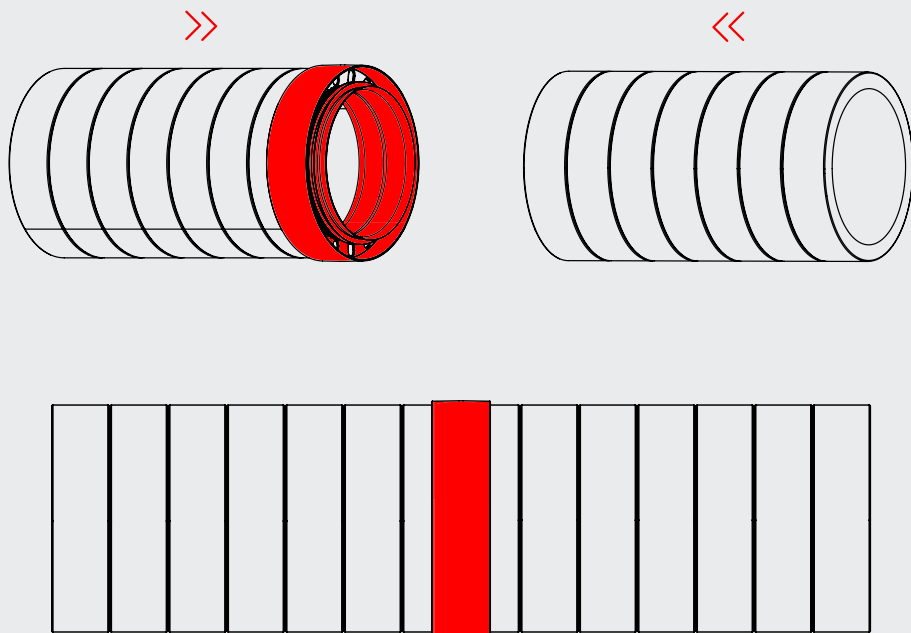


MOUNTING BRACKET

ARIA ADURO

ARIA
ADURO

 
 
● ○ ○ Connected in series or in parallel

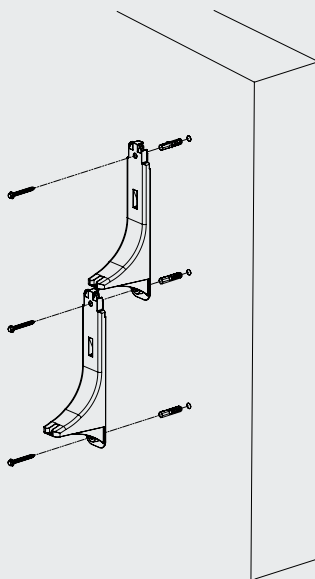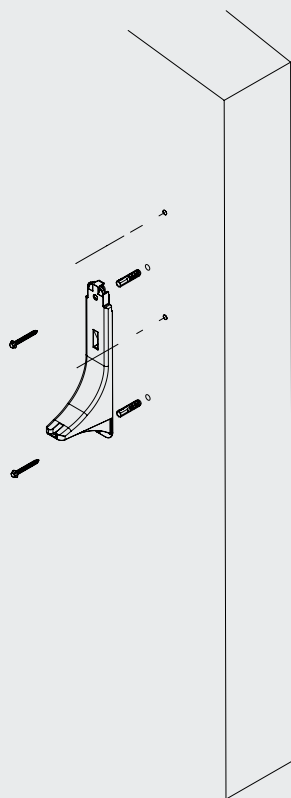

MOUNTING BRACKET

ARIA ADURO

 
 
● ● ○ Installation

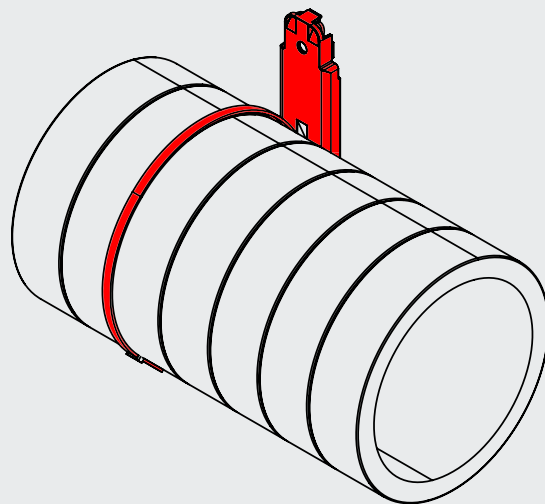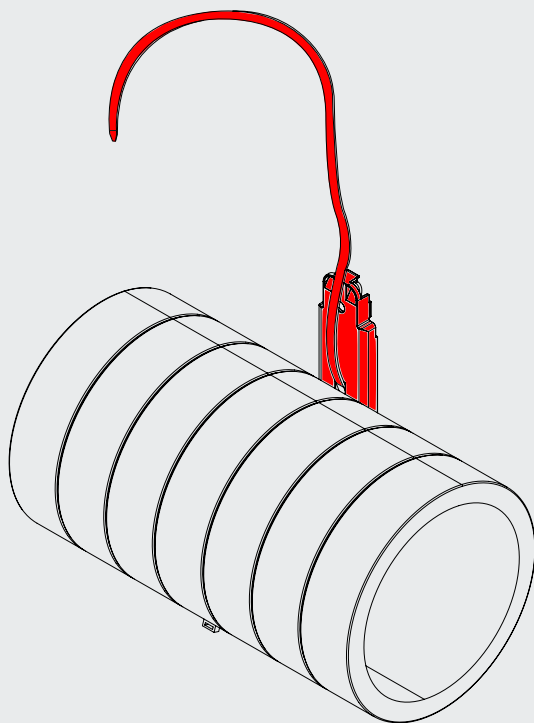

MOUNTING BRACKET

ARIA ADURO

  ● ● ● Arrangement

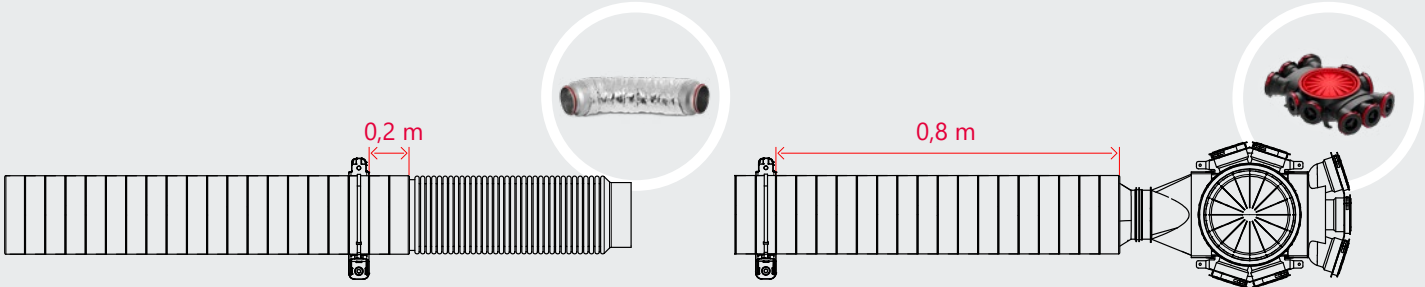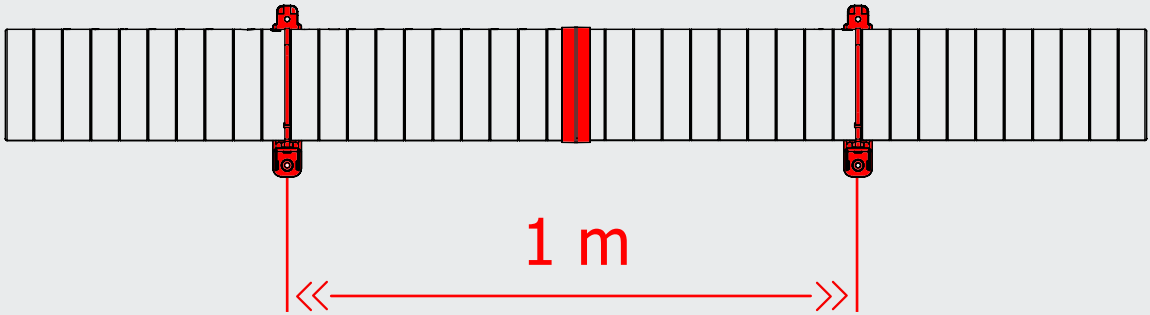


REDUCER 125/160/200 mm

ARIA ADURO

ARIA
ADURO

 ● ○ ○ Trimming

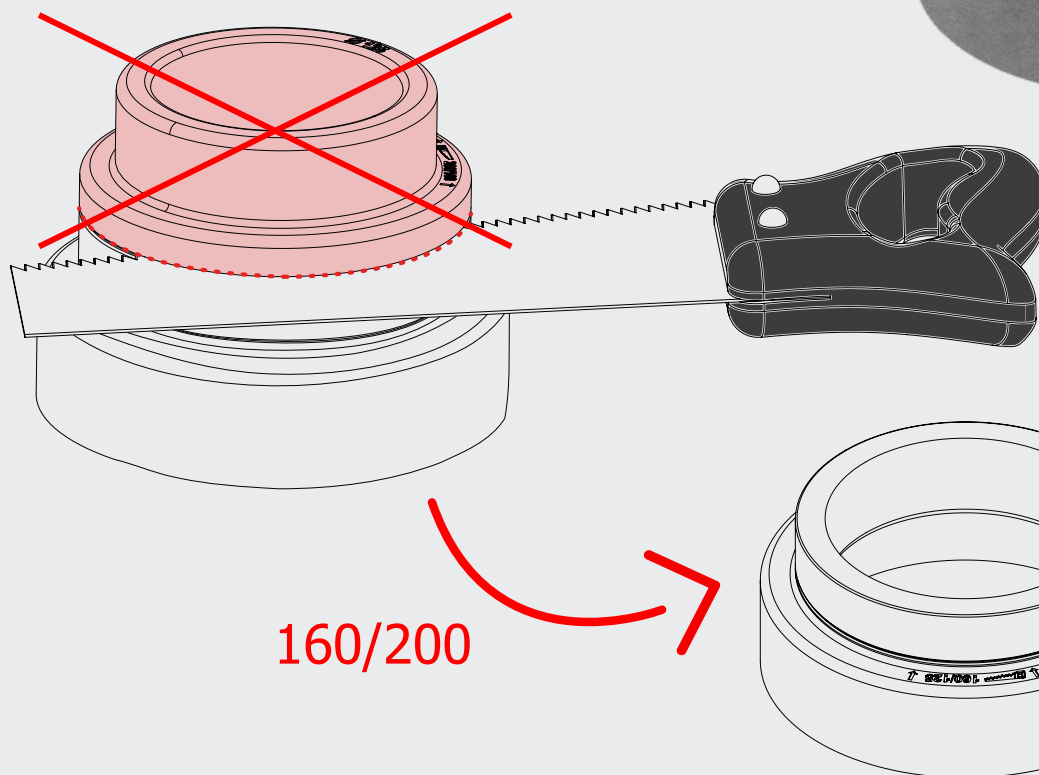

REDUCER 125/160/200 mm

 
ARIA ADURO

ARIA
ADURO

● ● ○ Trimming




125/160

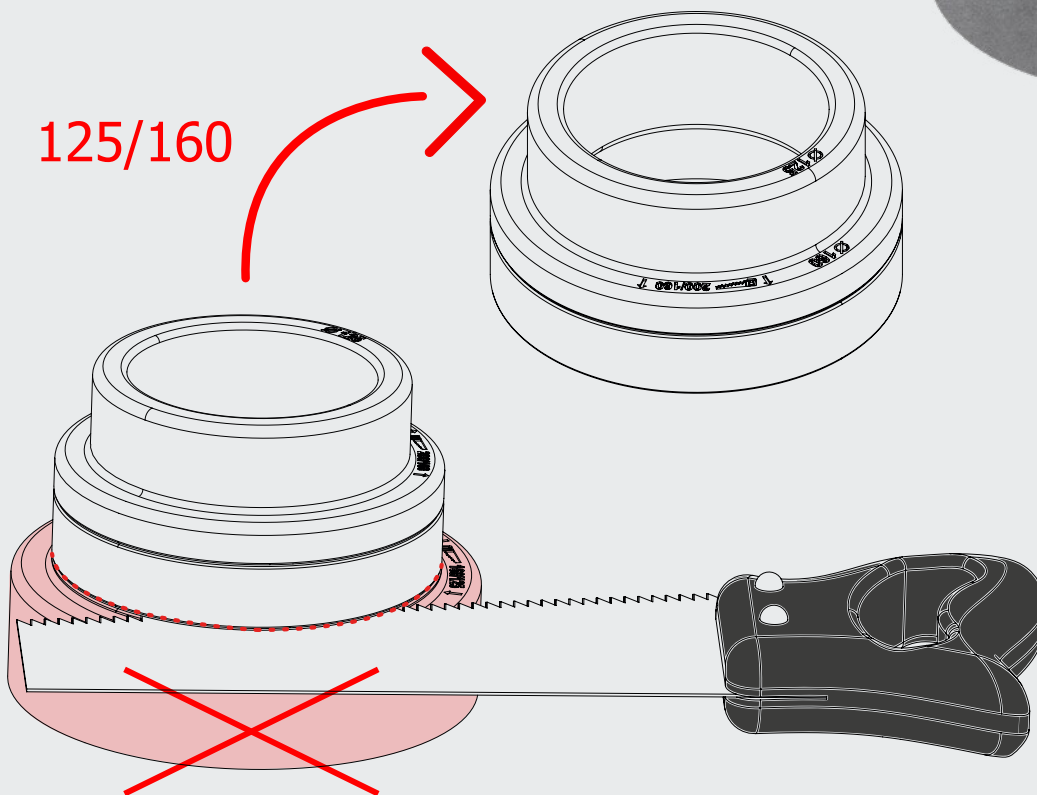

REDUCER 125/160/200 mm

ARIA ADURO

 ● ● ● Connecting

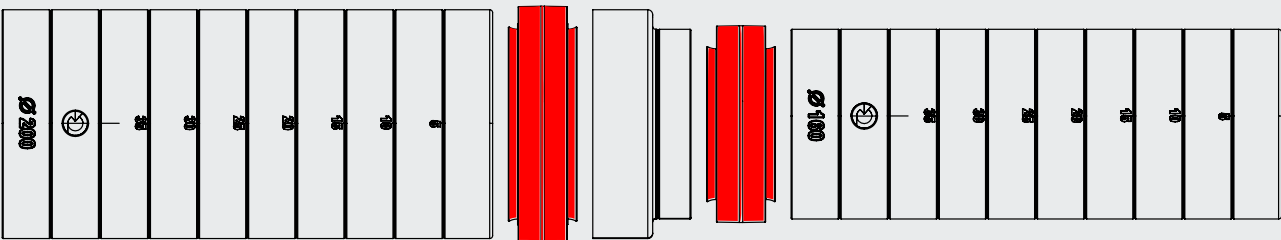


BEND 45°

ARIA
ADURO


ARIA ADURO

● Installation

 45°

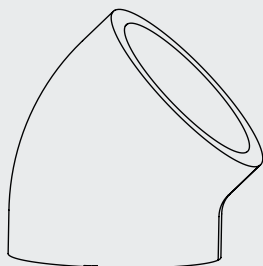

90°

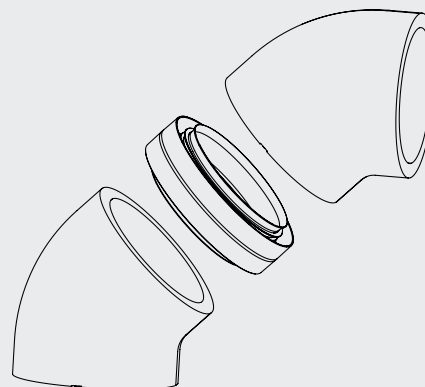 


AIR INTAKE / OUTLET

ARIA ADURO

ARIA
ADURO

 ● ○ Recommended wall opening diameter

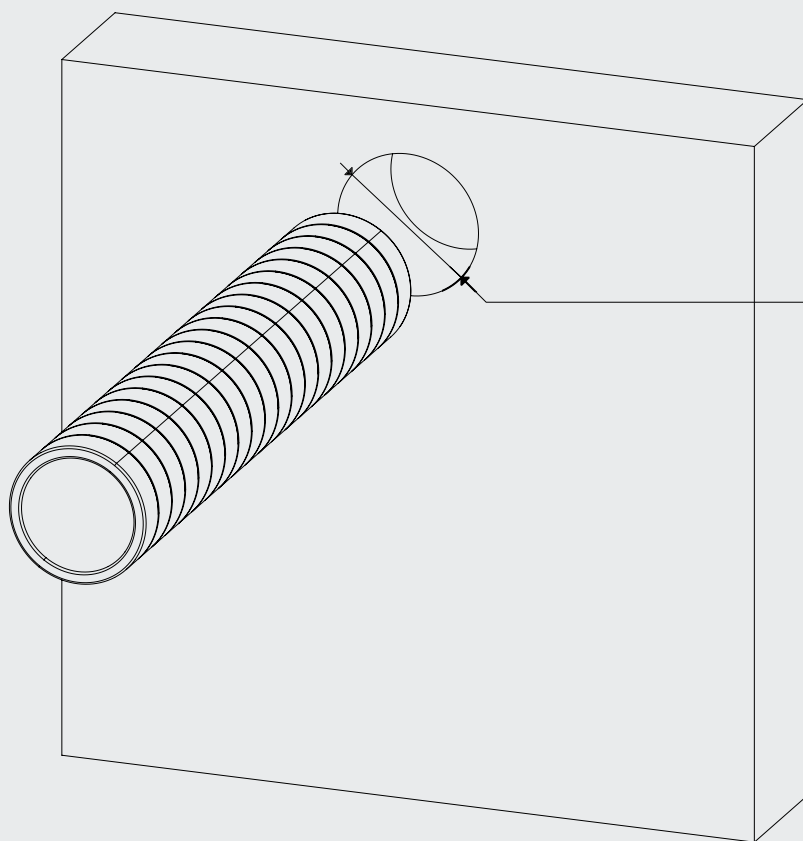

ADURO 125 mm
min. ø169

ADURO 160 mm
min. ø204

 
 
ADURO 200 mm
min. ø244

AIR INTAKE / OUTLET

ARIA ADURO

ARIA
ADURO

● ○ Installation – recommendation


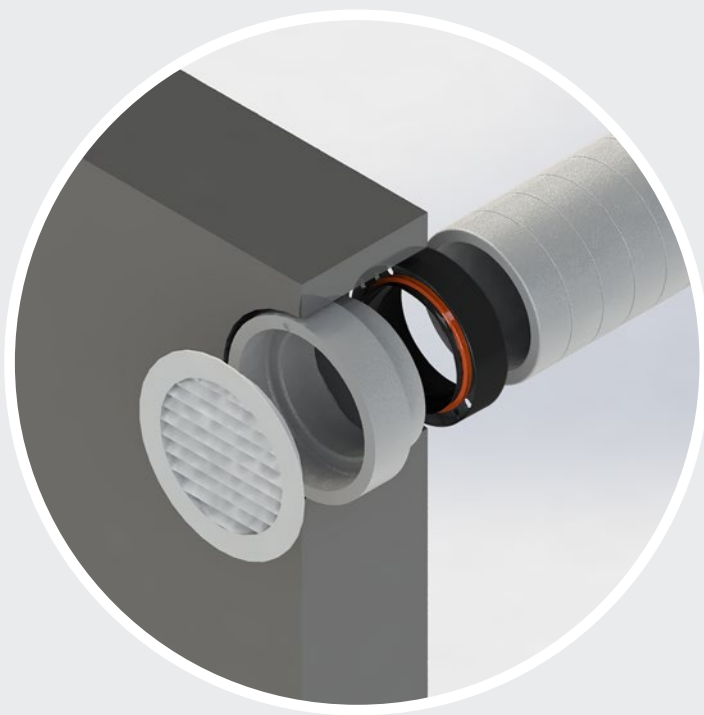
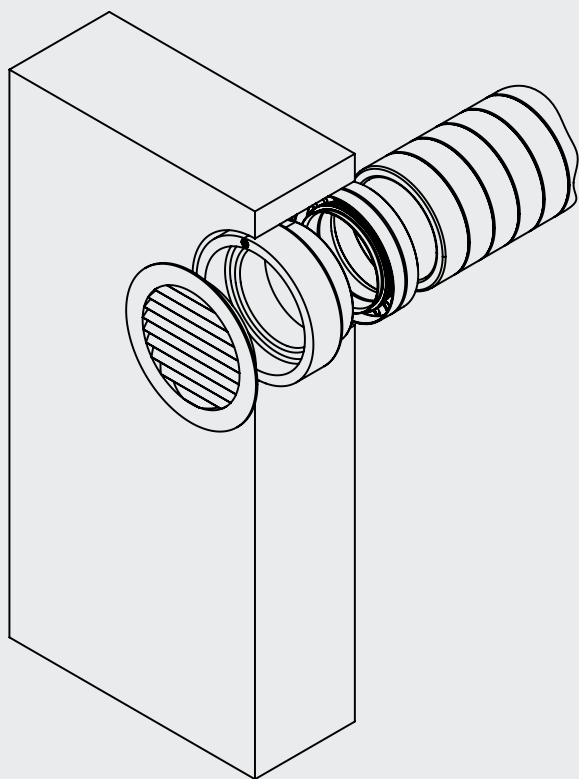


DAMPER AND TEE

ARIA ADURO

ARIA
ADURO

   ● Installation – recommendation

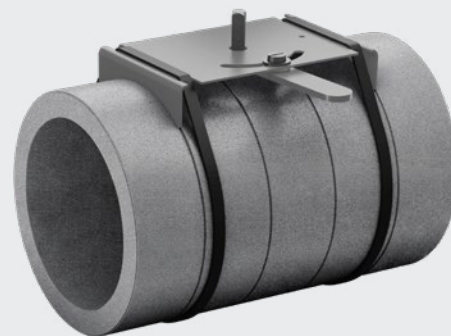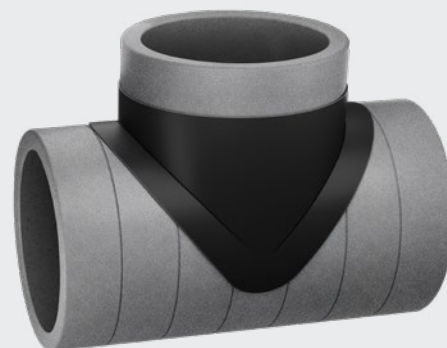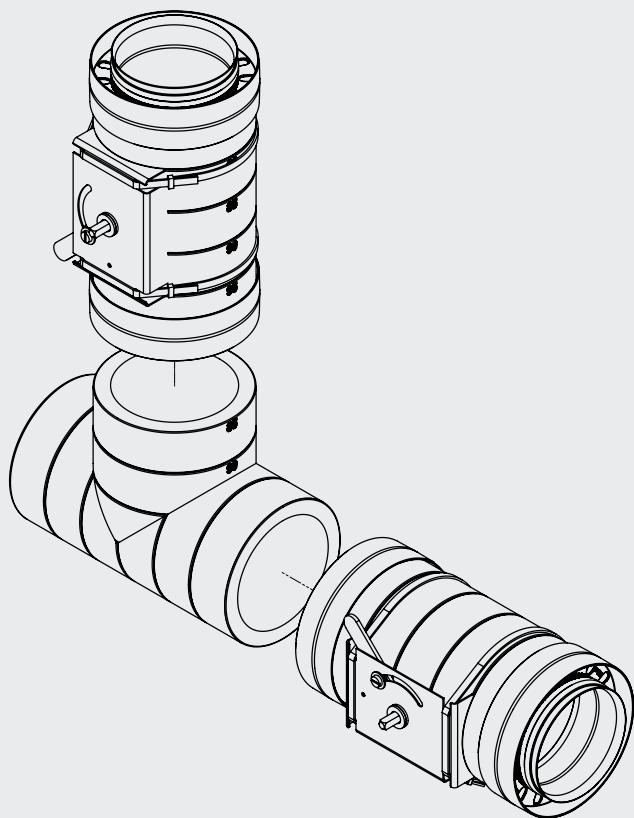

AIR DISTRIBUTION DUCTWORK

Complete system

ARIA
ADURO



ARIA